

KIRST KONVERTER™

U.S. Patent No. 6,047,490 • Patents Pending

Shoot cartridges in your Cap and Ball revolver

Instructions for installing the Remington Cylinder Pin Retainer Latch.

Make special note of the orientation of the spring and cylinder pin retainer latch when removing from the packaging. This is how the spring and latch must be oriented when placed into the loading lever slot.

1. Remove the loading lever pivot screw and loading lever.
2. Remove the tie wrap from the spring and latch.
3. Place the spring and latch into the loading lever slot with the hook end over the front of the cylinder pin.
4. Insert the tip of an awl into the threaded side of the screw hole; working the tip of the awl through the hole in the latch and spring. Using the tip of the awl to adjust the alignment of the parts to the screw hole; insert the screw, working it through the spring and the latch, pushing the awl out ahead of the screw. Seat and turn in the screw, seating snugly into position.